

Paper & Ribbon Replacement

Don't worry – this only takes a few minutes. Important: only change the paper while the printer is switched on.

PART 1 · REPLACE THE PAPER ROLL




1 Open the printer

Remove the output tray at the front. Press the grey lever and pull out the drawer.



2 Open the paper compartment

Use the blue lever at the top left to open the paper compartment.

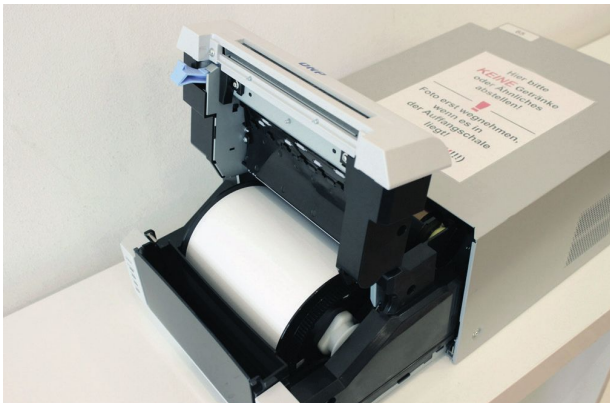

3 Remove the old roll

Take out and empty the paper scrap tray. Lift out the empty paper roll.



4 Insert the new roll

The roll must unwind downwards towards the printer. Insert it and rotate it down until it beeps. Put the scrap tray back and close the compartment.

Something stuck?

Just give me a call – I'm happy to help.

David · +41 79 943 54 77
info@laechelwerk.ch · laechelwerk.ch

PART 2 · REPLACE THE RIBBON & FINISH



5 Pull out the ribbon

Pull out the ribbon cassette by its black handle.



6 Insert the ribbon

The yellow holder of the thicker roll goes front right. Snap both holders into the notches. Turn the thin roll until yellow film is visible. The ribbon runs over the top of the rolls.



7 Close & done

Close the printer and re-attach the output tray. The printer ejects 5 blank sheets – that's normal. Then it prints again.

Something stuck?

Just give me a call – I'm happy to help.

David · +41 79 943 54 77
info@laechelwerk.ch · laechelwerk.ch